
MARTIN

FURNITURE

Item No. : EB300 Installation guide

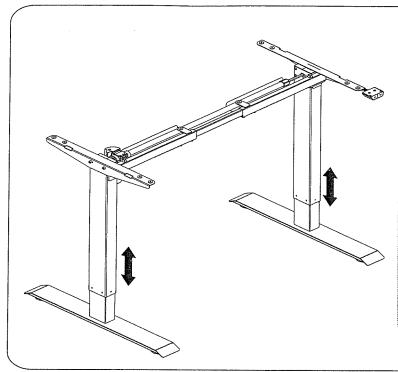

Technical data

Column Number	2
Maximum Load	1541bs
Max Speed	0.98inch/s
Input Voltage	100-240V
Lowest Position	27. 9 i nch
Highest Position	47. 6 i nch
Desktop Size	39. 4–63. 0 i nch 19. 7–31. 5 i nch
Duty Cyde	Continuous operation for 2 mins at most after pause for 18 mins
Applicable Temperature	0~40°C

Accessory list

Attention: The drawings below are only for reference which might be slightly different from the actual object, please in kind prevail. Any tools missing or installation problems, please contact the customer service firstly.



Cable tie

















Part list


No.	Part	Qty	No.	Part	Qty	No.	Part	Qty
1	Pedestal	2	2	Column	1	3	Column	1
4	Supporting beam	1	5	Transmission rod	1	6	Supporting plate	2
7	Adapter	1	8	Baffle	2	9	Power cable	1
(1)		1					L	

 


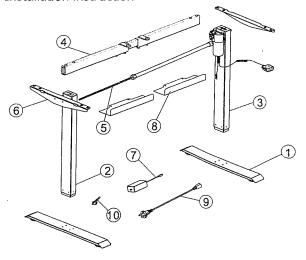


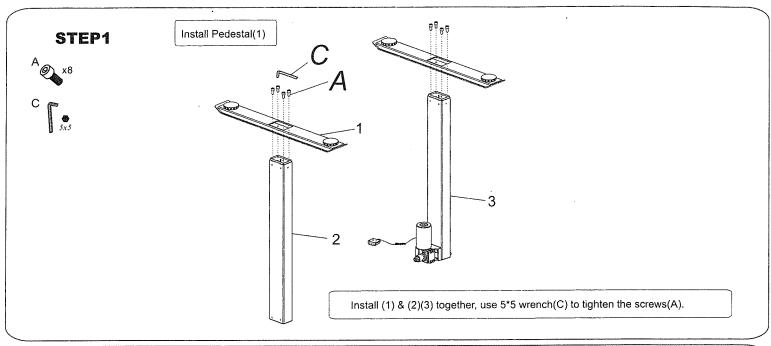


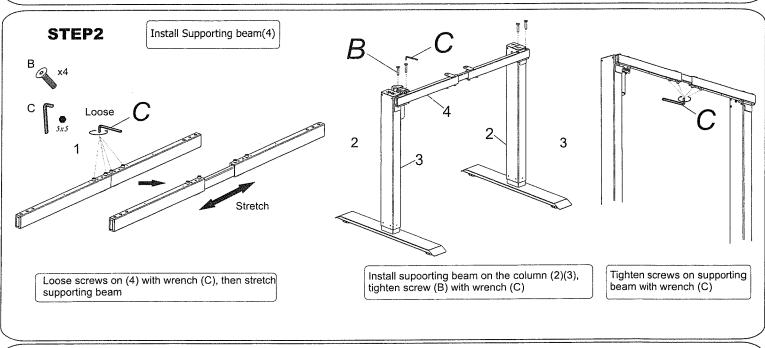

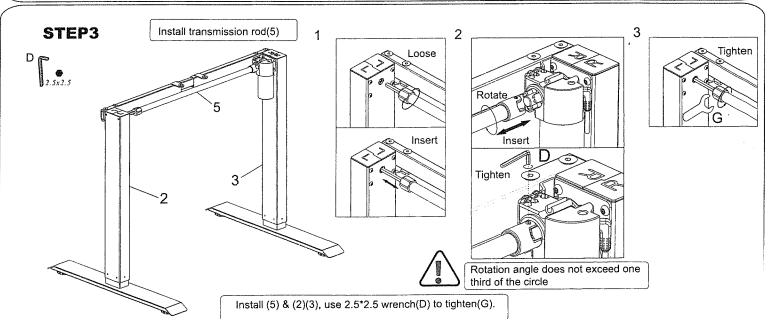

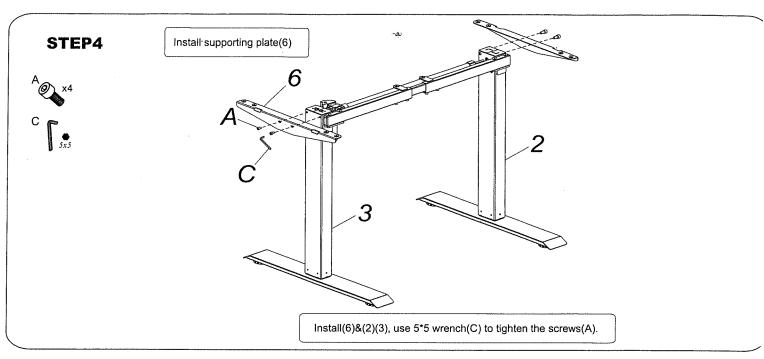

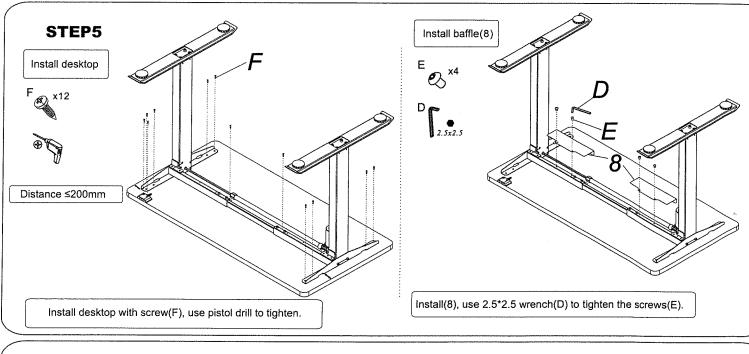

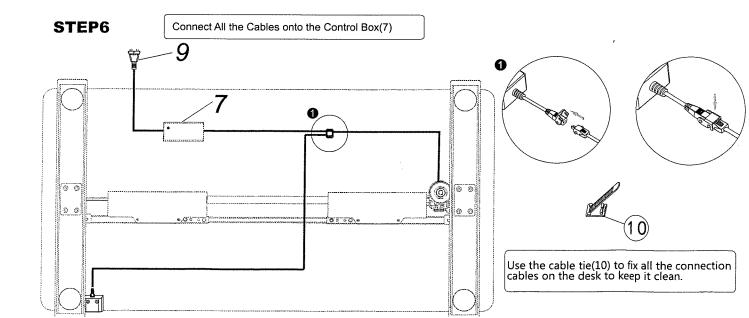

How to use handswitch

•	" ▲ "	Adjust the desk upwards	-
•	"▼"	Adjust the desk downwards	

Instruction


Press the UP button or DOWN button to lift or lower the height of desk surface.

Common fault treatment

The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Fault phenomenon	Method				
No response while long pressing down arrow after connected with	Check if all the cables be connected well				
a power supply	2.Contact your supplier or dealer				
The desktop could not be lifted	1.Check if overloaded, max loading: 154lbs;				
The desktop could not be lifted	2.Contact your supplier or dealer				
Overwork (Duty cycle:Max 2min on/30min OFF)	Restart it after suspend for 30mins for the working time is too long				
(Bady Gyold, Max Emill Off Off)	2.Contact your Martin Furniture-619-671-5100				

Button

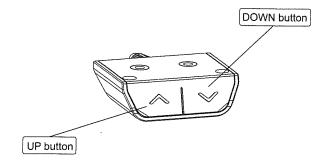



- 1. Power supply: AC100V-240V,50/60HZ
- 2. Service Environment: 0-40°C
- 3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector.
- 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household waste.
- 5. Check carefully to ensure correct and complete assembly before using.
- Be familiar with all functions and program settings of the product before first use.
 Children are forbidden to play on the product because of unforeseen action when playing, so any dangerous consequences caused by this improper action will not be on
- Slight noise caused by the V-ribbed belt or brake system due to structure will not have any effect on the use of the equipment.
- 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the cleaner used will not pollute the environment.
- 10. Please make sure there is no hazard sources in your operating environment, e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children.
- 11. Keep the original package of the equipment if necessary in case of the future use in transportation.
- 12. The following tips will help you detected and eliminate the common fault and error. If the fault you met is not listed below, please contact with your supplier. Only the manufacturer and professionals are capable for investigating and correcting those fault and error.

Waste disposal





This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.